
SRR Measurements with LI-COR 6400 Prepared by Jessica Schaefer July, 2007 Turning on LI-COR

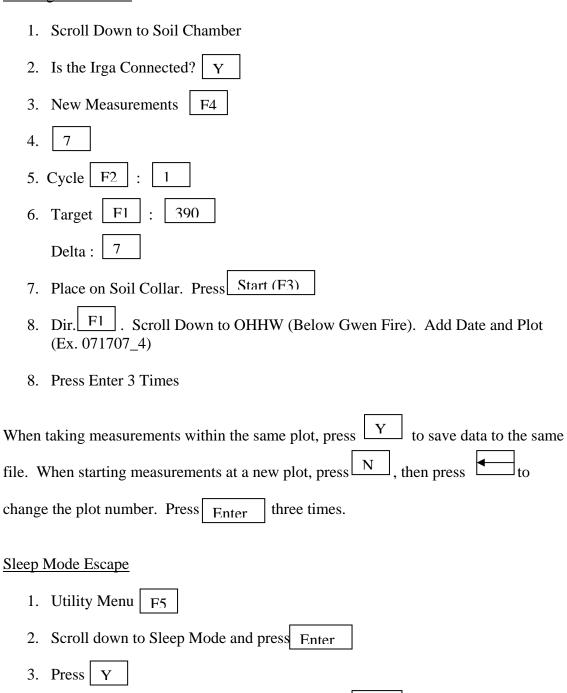

4. Press any key for machine to wake up. Press

Esc

to leave Utility Menu.

Re-Zero – Should be done twice a month

- 1. Soil Chamber
- 2. Is the Irga Connected? Y
- 3. Calib Menu F3
- 4. "Irga Zero (CO2s, H2Os)"
- 5. Have you re-plumbed? Y
- 6. Plot F4
- 7. When levels even out, press Esc
- 8. Quit F5